

To turn on the remote, press and hold the menu key for about 2 seconds (words will appear on the remote).

To send your vote press "yes" or "no" or the letter or numeric choice then press the "send" key. In a multiple mark question (e.g. choose 2) input both letter choices then "send".

To change your answer, press the "clear" (c) key. Retype your answer and press "send."

If you accidentally press the "menu" key rather than the "send" key, your remote may say "help", "User ID", or "Session". Simply use the scroll keys to scroll to "Exit" and press "send."

